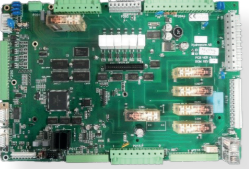 
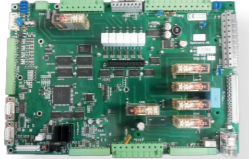 
 




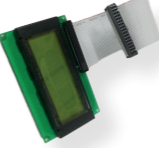 



# Spare parts

## HydroElite version 5

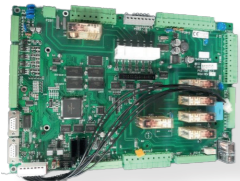
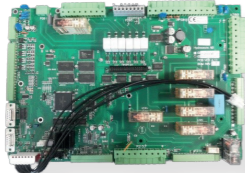

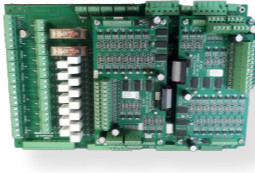
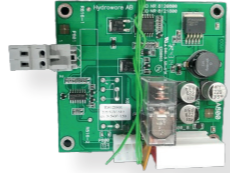

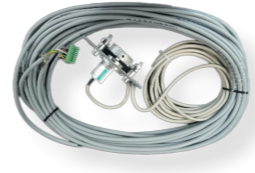
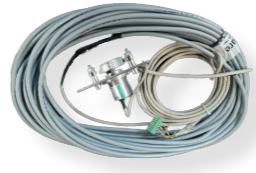
| Item no.    | 8123201   | 8124202   | 8123602   | 8123702  | 8123900   | 8123005   | 8620120   | 8121123   | 8121124   |
|-------------|---|---|---|--|---|---|---|---|---|
| Description |  |  |  |  |  |  |  |  |  |
|             | PCB Control node CPU A201 5.20 (3G-5)   | PCB Control node Base A202 (2V-2M) (3G-5.20)                                      | PCB Car node A602 (3G-5.20)   | PCB Car node CPU A702 (3G-5.20)  | PCB Door Con A900 5.20 (3G-5)   | PCB Terminal, Tableau A5 5.20 (3G-5)  | Absolute Encoder 5m, comp SpP (V5)  | PCB Control-I/O-1 A203 (A204) 5.20 (3G-5)   | PCB Control-I/O-UCM A203 (A204) (3G-5)  |

## HydroElite version 4

| Item no.    | 8121300   | 8121302   | 8120601   | 8120701   | 8121800   | 8660108   | 8660064   | 8120302   | 8620036   |
|-------------|---|---|---|---|---|---|---|---|---|
| Description |  |  |  |  |  |  |  |  |  |
|             | PCB, Control node 230/110V v4.11  | PCB, Control node 230/110V 2-V v4.11  | Car node board, Safe Con A601   | Car node board CPU A701   | Battery charging board A800 v4  | Door board A900 v4 kompl. Spare part  | A50, A51, A55 board   | LCD-Display w cable   | Absolute encoder 5m v4, Sp P compl  |

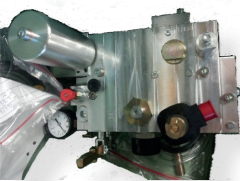
## HydroElite version <4

Item no.  
Description

| 8120695   | 8120696   | 8120600   | 8120670  | 8120800   | 9610008   | 9610009   | 9610010   |
|---|---|---|--|---|---|---|---|
|  |  |  |  |  |  |  |  |
| PCB, Control node 230/110V <v4 (v4.11)  | PCB, Control node 230/110V 2-V <v4 (4.11)   | Car node board A600+500 <v4 ,Sp part  | Car node board 2 <v4 A600+A500+A700  | Battery charge board A800 <V4   | Encoder 10m <v4, pit placed, compl  | Encoder 20m <v4, pit placed, compl  | Encoder 30m <v4, pit placed, compl  |

## Complete Dynahyd valve blocks

Item no.  
Description

| 9610084   | 9610085                              | 9610087                              | 9610088                          | 9610090   | 9610091                          | 9610093                          |
|---|--------------------------------------|--------------------------------------|----------------------------------|---|----------------------------------|----------------------------------|
|  |                                      |                                      |                                  |   |                                  |                                  |
| Valve with filter, 1.1/4', 125 l/min  | Valve with filter, 1.1/4', 150 l/min | Valve with filter, 1.1/4', 210 l/min | Valve with filter, 2', 250 l/min | Valve with filter, 2', 360 l/min, (330-380) compl R | Valve with filter, 2', 440 l/min | Valve with filter, 2', 600 l/min |



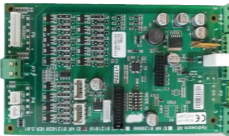


## Parts for Dynahyd valve

| Item no.    | 9610143  | 9610144  | 8150084  | 8150085  | 9610026  | 9610033  | 8150068   |  |
|-------------|--|--|--|--|--|--|---|--|
| Description | <br>Servo P8 + filter 1.1/4" (75-210l/min), Compl R | <br>Servo P8 + filter 1.1/4" (75-210l/min), Compl R | <br>Solenoid valve VMD 1.1/4" | <br>Solenoid valve VMD 2" | <br>Gasket Kit Dynahyd 1 1/4" Valve | <br>Gasket Kit Dynahyd 2" Valve | <br>Coil VMD 24V |  |

## Parts for Dynahyd valve

| Item no.    | 8150071  | 8150074   | 8150100   | 8150118  | 8130430  | 8130176   | 9610063  | 9610064  |  |
|-------------|--|---|---|--|--|---|--|--|--|
| Description | <br>Hand pump plate 1.1/4", compl R | <br>Handpumpplate 2", compl. R | <br>VRP 1.1/4", compl. | <br>VRP 2", compl | <br>Pressure switch, analogue | <br>Pressure switch, V4 DZE compl. | <br>Door Lock Valve <=400 l/min, compl. Sp Part | <br>Door Lock Valve <=800 l/min, compl. Sp Part |  |

## Common parts for V5, V4, V<4

| Item no.    | 8120000   | 8121010   | 8121020   | 8120950   | 8120951   |
|-------------|---|---|---|---|---|
| Description |  |  |  |  |  |
|             | Landing node board  | PCB Landing node MX-B   | Landing node PCB MF   | Soft starter HYD t HYD 13 kW  | Soft starter HYD t HYD 24 kW  |

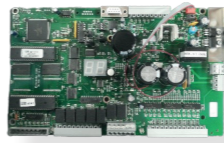
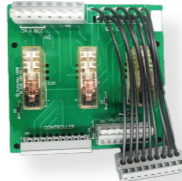

## Common parts for V5, V4, V<4

| Item no.    | 8120952   | 9610070   | 9610071   | 9610072   | 9610017   | 8120044   |
|-------------|---|---|---|---|---|---|
| Description |  |  |  |  |  |  |
|             | Soft starter HYD t HYD 47 kW  | Contactor 7,5kW/18A/230V, compl.  | Contactor 16kW/32A/230V, compl.   | Contactor 22kW/50A/230V, compl.   | Power supply Type S - Compl Sp.P.   | Battery 12V/2,4Ah   |


## Pumps

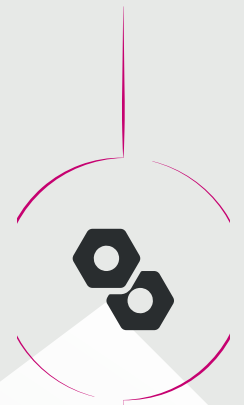
| Item no.    | 8130099   | 8130091                 | 8130095                 | 8130218                 | 8130123                 |
|-------------|---|-------------------------|-------------------------|-------------------------|-------------------------|
| Description |  |                         |                         |                         |                         |
|             | Screw pump<br>100 l/min   | Screw pump<br>125 l/min | Screw pump<br>250 l/min | Screw pump<br>380 l/min | Screw pump<br>500 l/min |

## Dynahyd

| Item no.    | 8130148   | 8130149   | 9610028   |
|-------------|---|---|---|
| Description |  |  |  |
|             | Dynahyd Main<br>Board   | Dynahyd Safety<br>Board   | Encoder IGS 200   |

## Submersible motors

| Item no.    | 8130511   | 8130558  | 8130519  | 8130512  | 8130132                      |
|-------------|---|--|--|--|------------------------------|
| Description |  |  |  |  |                              |
|             | Elmotor<br>submersible,<br>400V 11kW<br>155mm L=2,5m                                | Electr. motor<br>subm, 400V<br>14,7/16kW 155mm<br>L=2,5m | Elmotor<br>submersible,<br>400V 24kW<br>220mm L=2,5m | Elmotor<br>submersible,<br>400V 29kW<br>L=2,5m | Electric motor 47<br>kW 400V |



**Headquarters: Hydroware AB**

Fabriksgatan 13, 342 21 Alvesta  
Email: [spares@hydroware.se](mailto:spares@hydroware.se)  
Phone: +46 (0) 472 183 355  
[www.hydroware.global](http://www.hydroware.global)

**Version 1.2 (04.2026)**

Please be advised that the illustrations may deviate slightly from the originals, and the information provided is subject to errors, potential revisions and/or changes in price.